


# UNFOLD



1 | UNFOLD  
Remove the X tent from the carry bag and unfold the frame.

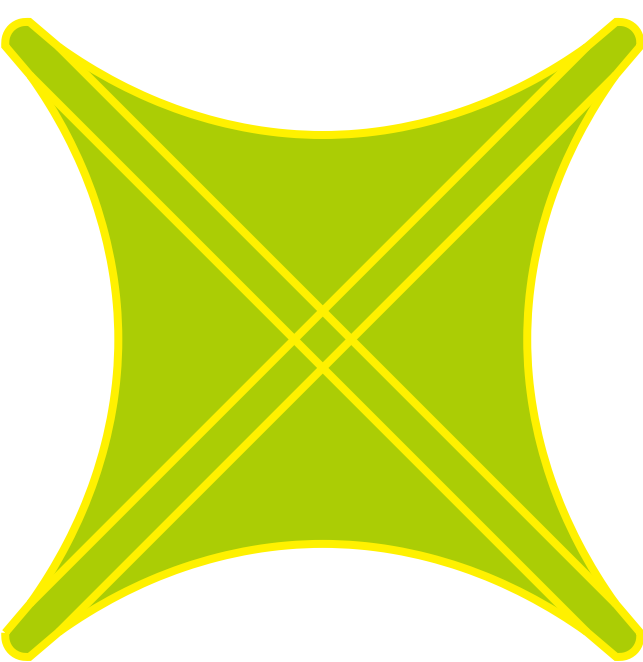

2 | POSITIONING  
Make sure the canopy is above and the legs are below








3 | TIGHTEN VALVES  
Each leg have 1 inflate / deflate valve and 1 overpressure valve. Tighten the valves.

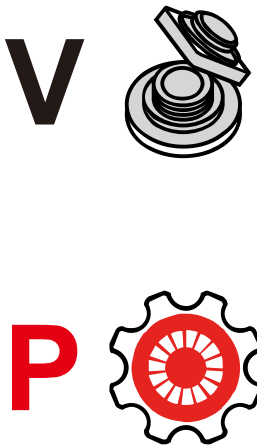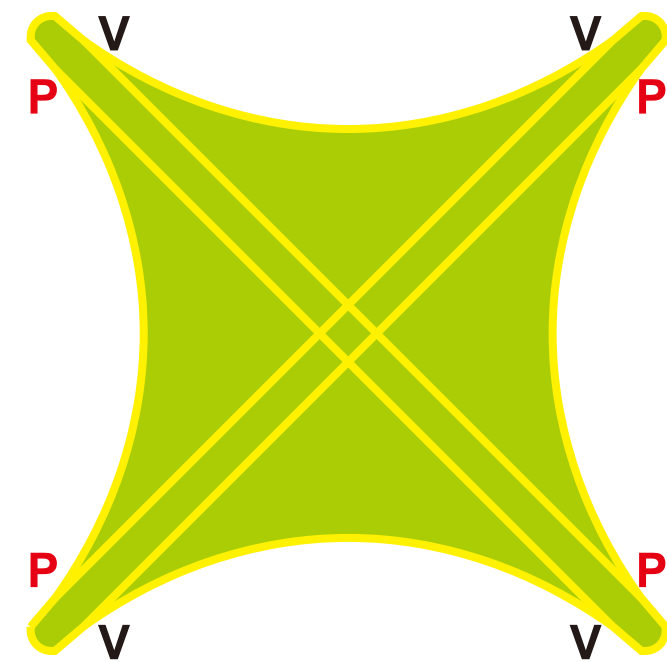

# INFLATING




4 | INFLATING  
Insert the electric pump into the opened inflate / deflate valve and inflating the four legs separately

ABOUT THE PRESSURE  
Inflate untill the tube feels very solid (3PSI/0.2BAR).  
The remaining air will escape through the overpressure valve.

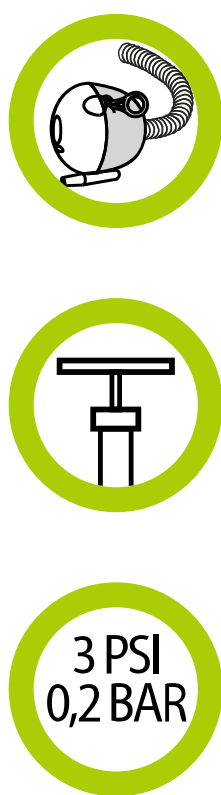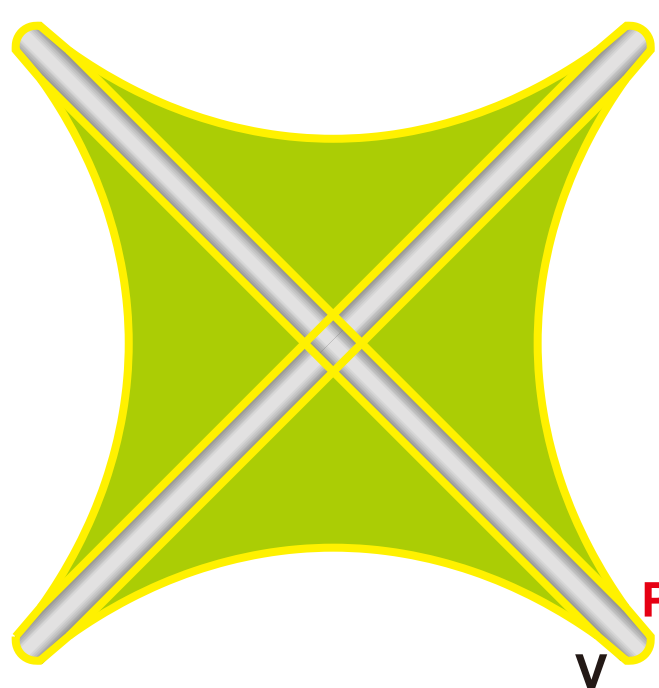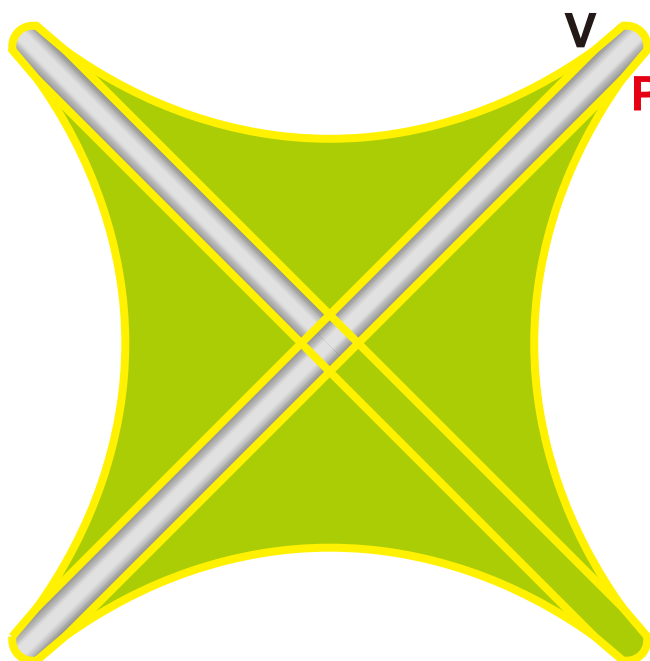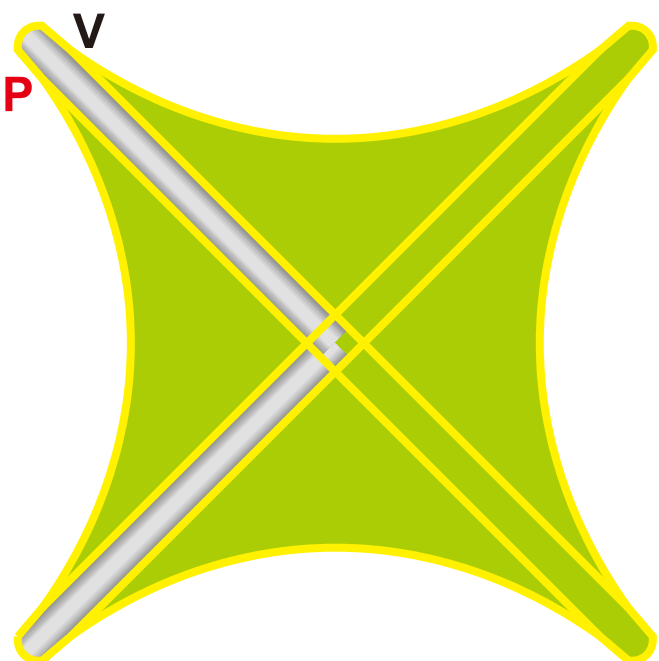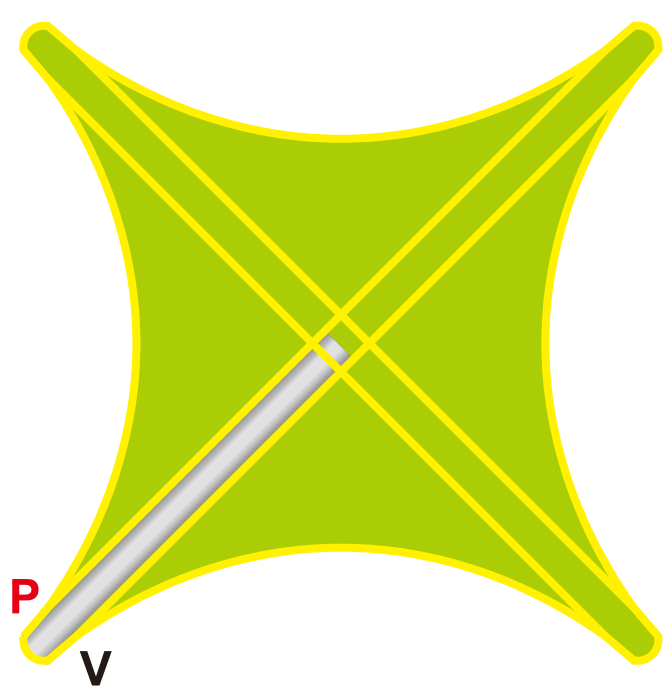


# POSITIONING

5 | POSITIONING LEGS  
Drive 8 stakes into the ground at an angle of 40 degrees .  
When you cannot use stakes on solid ground ,  
you can buckle 4 water barrels to the 4 legs .

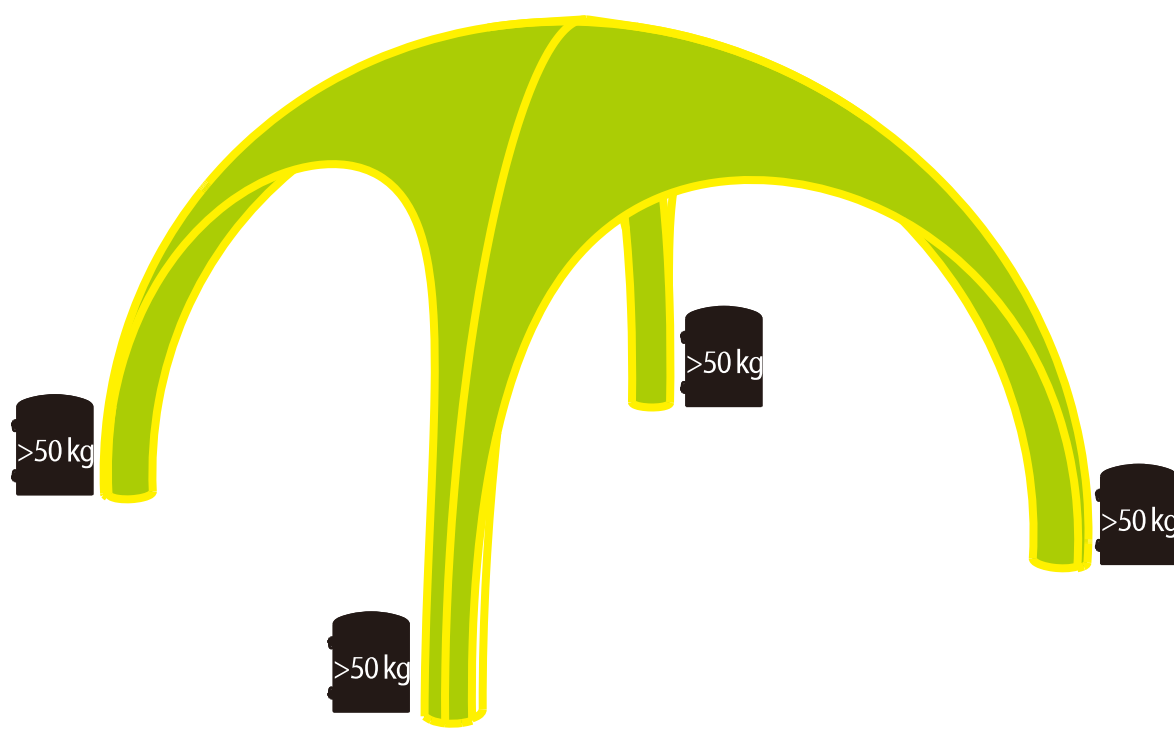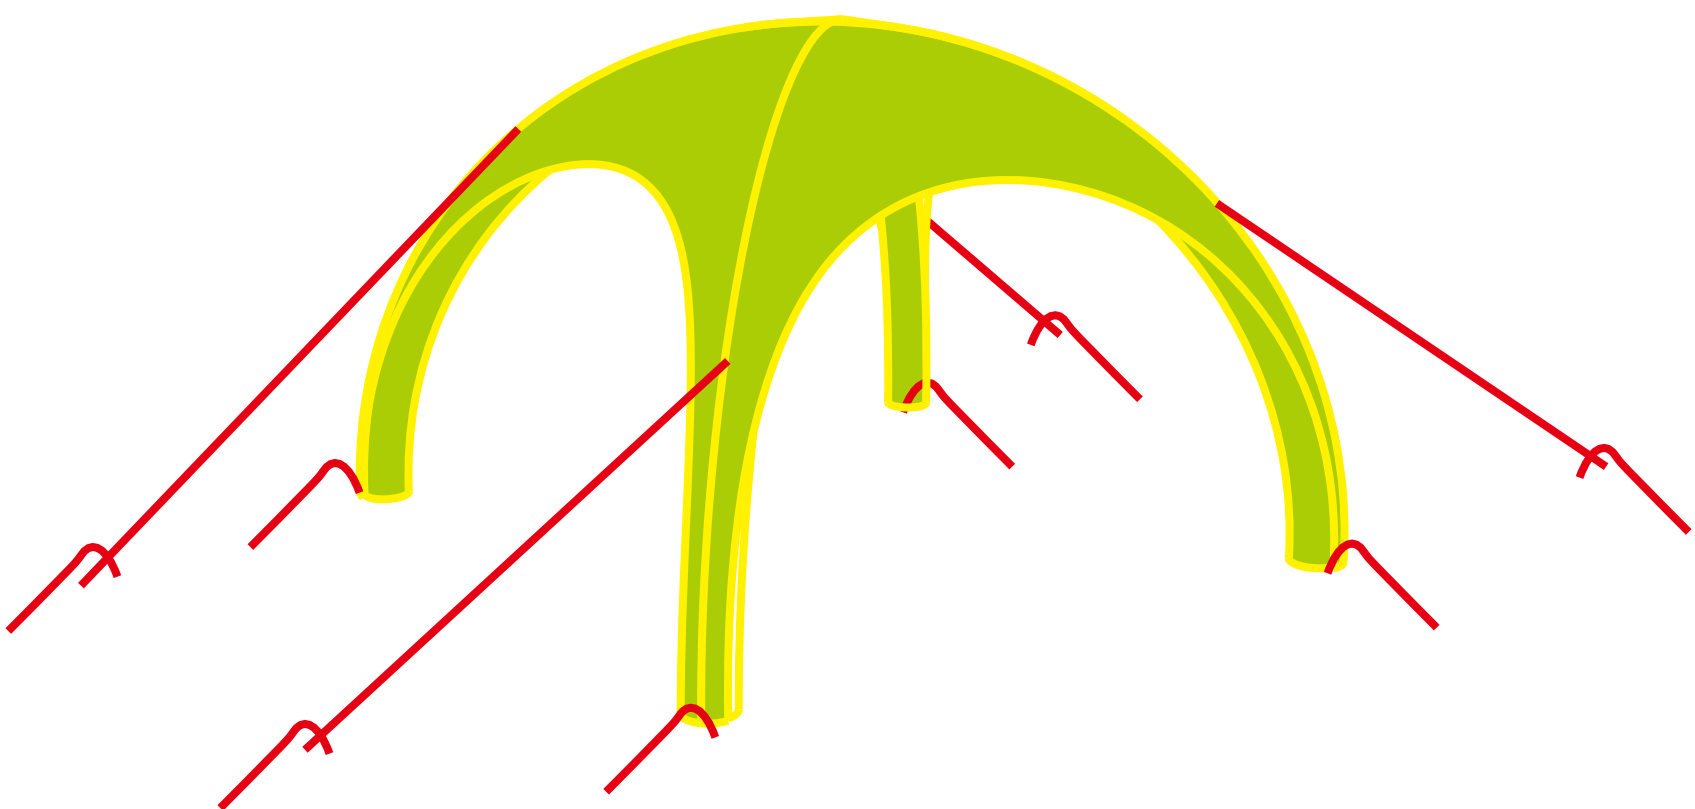
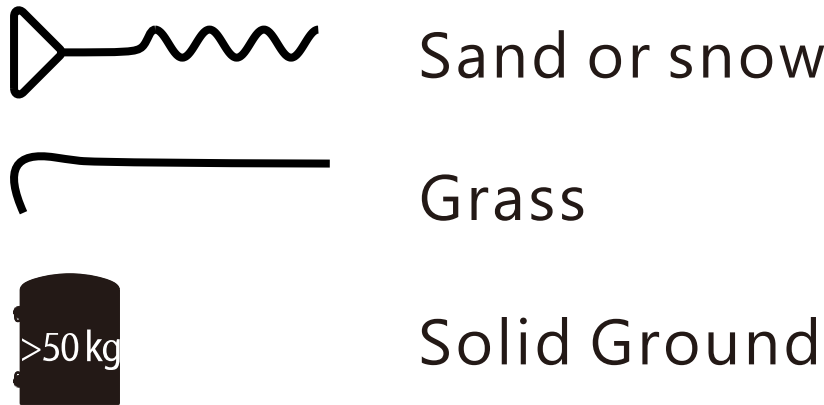


# REPLACE THE CANOPY

6 | REMOVE THE OLD CANOPY  
Remove the old canopy and pull down the zipper from top to bottom

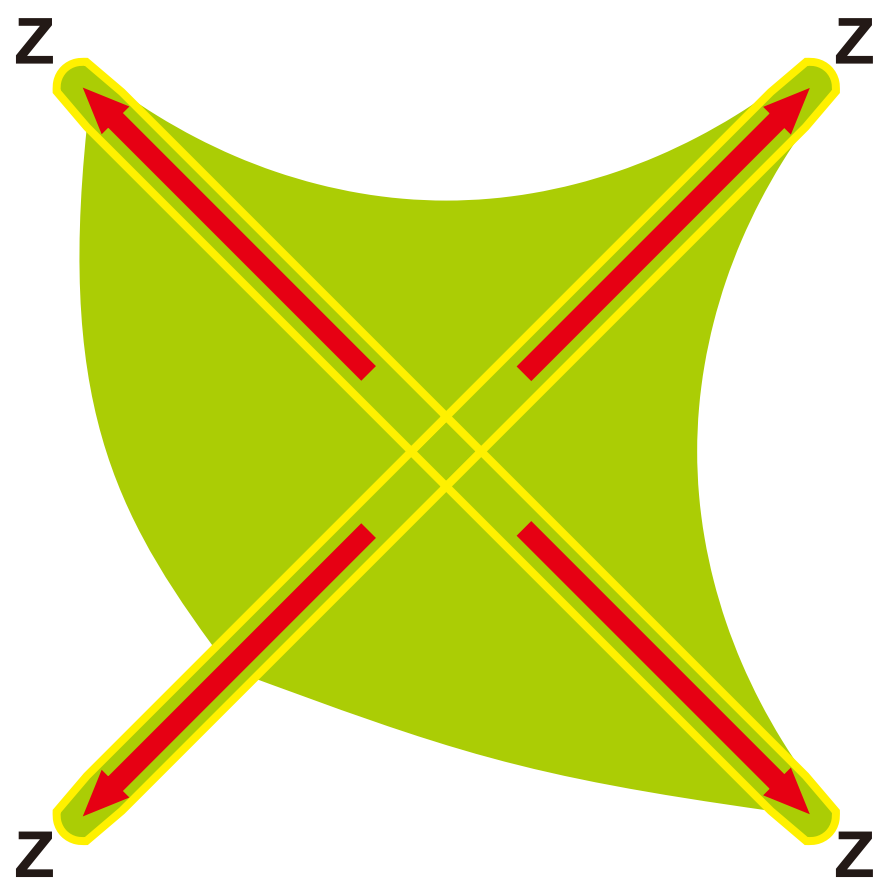

7 | INSTALL THE NEW CANOPY,  
Put the new canopy on,  
pull the zipper from bottom to top

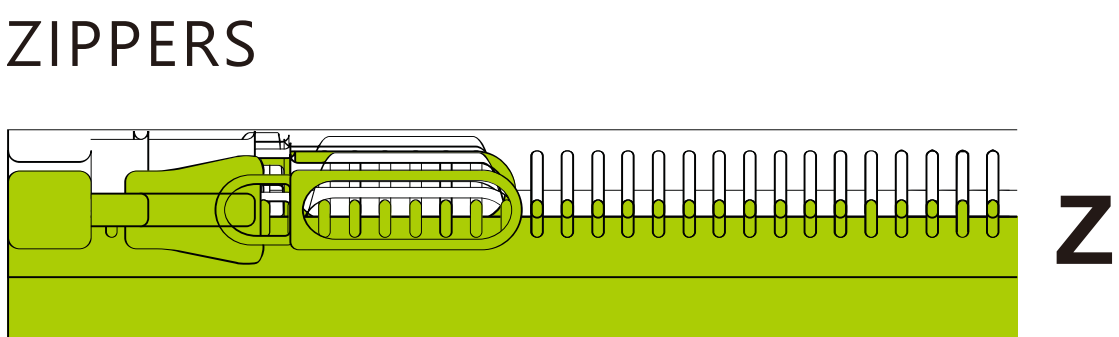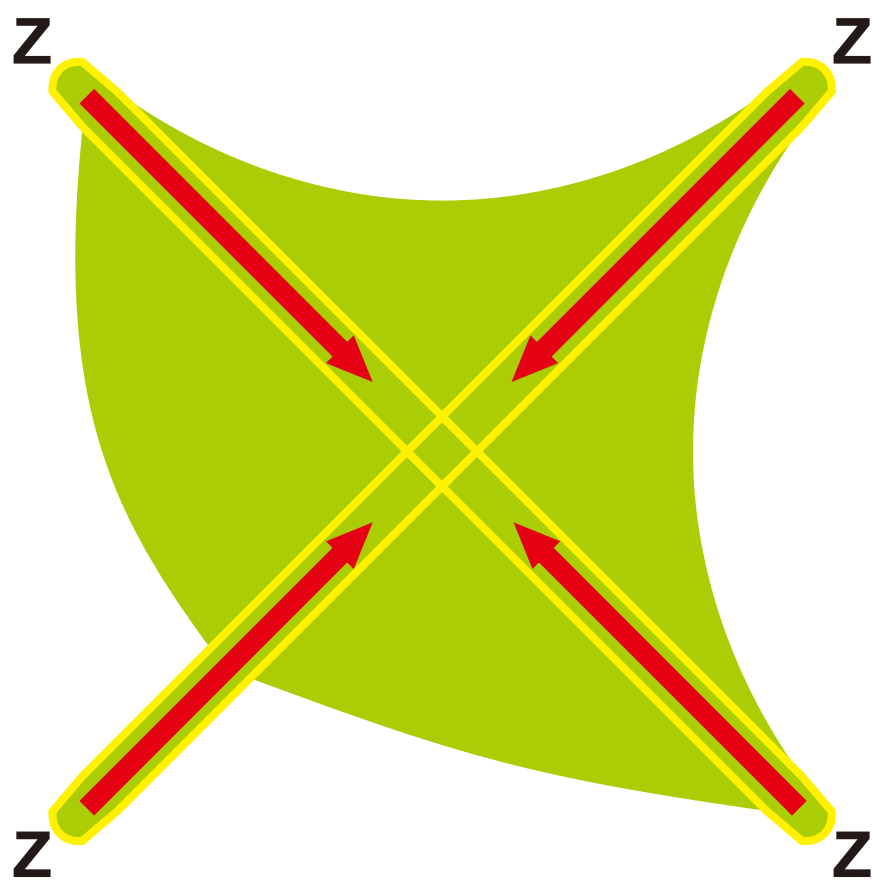


DEFLATE

8 | DEFLATE  
Deflate X tent by opening the 4 inflation valves. Do not remove the overpressure valves


FOLDING & STORAGE


9 | FOLD


10 | STORAGE  
**Do not storage the X tent when it's wet.** Hang both frame and cloths in a dry environment.

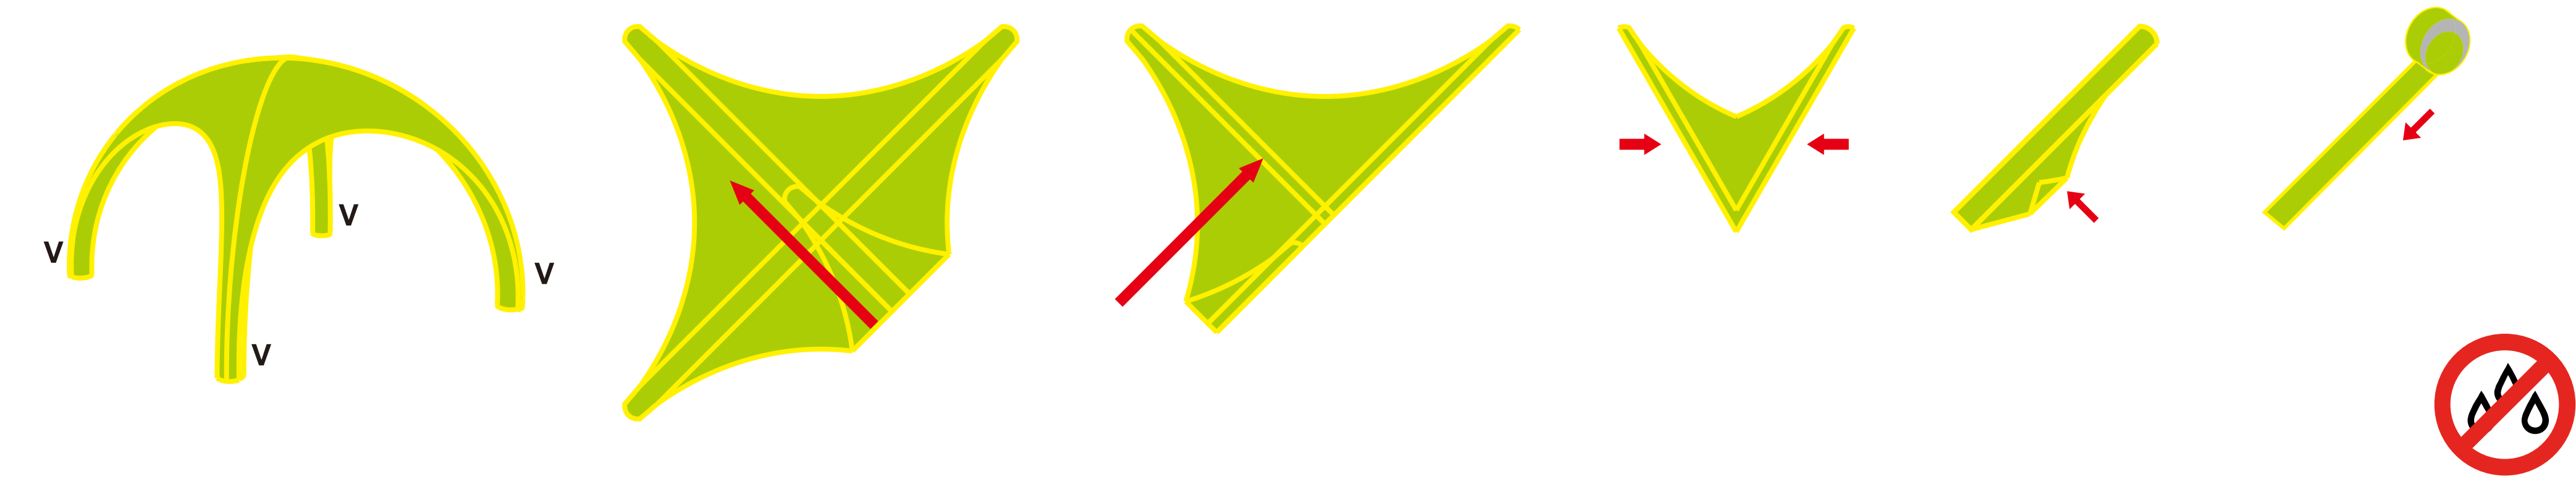



DO'S AND DONT'S


- 


Do not use sharp objects
- 


Do not use chemicals for cleaning
- 

Do not use near an open fire or heated objects
- 

Do not store the X tent when it's wet
- 

Can be used till 6 bft.
- 

Pressure (3PSI/0.2 BAR)
- 

Anchor with stakes on soft ground
- 


Anchor with water barrels on hard ground

NEVER LEAVE THE X TENT UNATTENDED AND TAKE CARE OF YOUR BELONGINGS


AFTER USE OF THE X TENT ONE STORE IT IN A DRY PLACE  
Never store a wet tent. Hang out all the canopy and the leg frame in a dry and warm place.

CLEANING  
Only use water with a soft handbrush and a wet cloth to clean the tent.  
Do not use any cleaning products.

PARTS

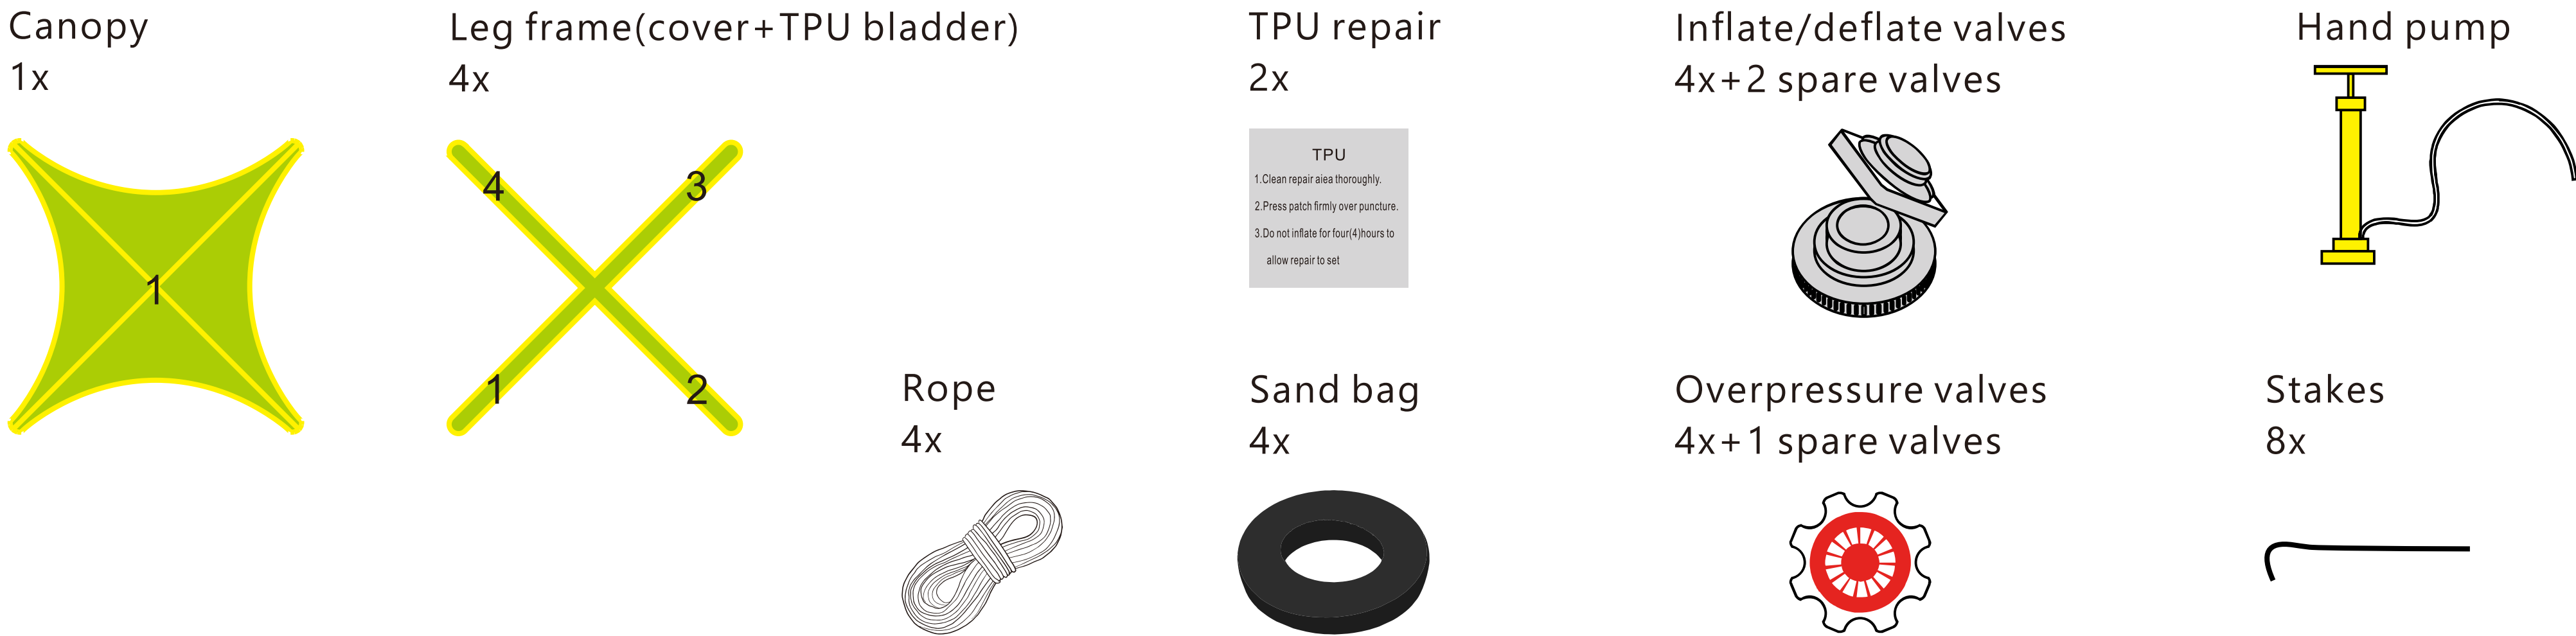

ACCESSORIES  
OPTIONAL

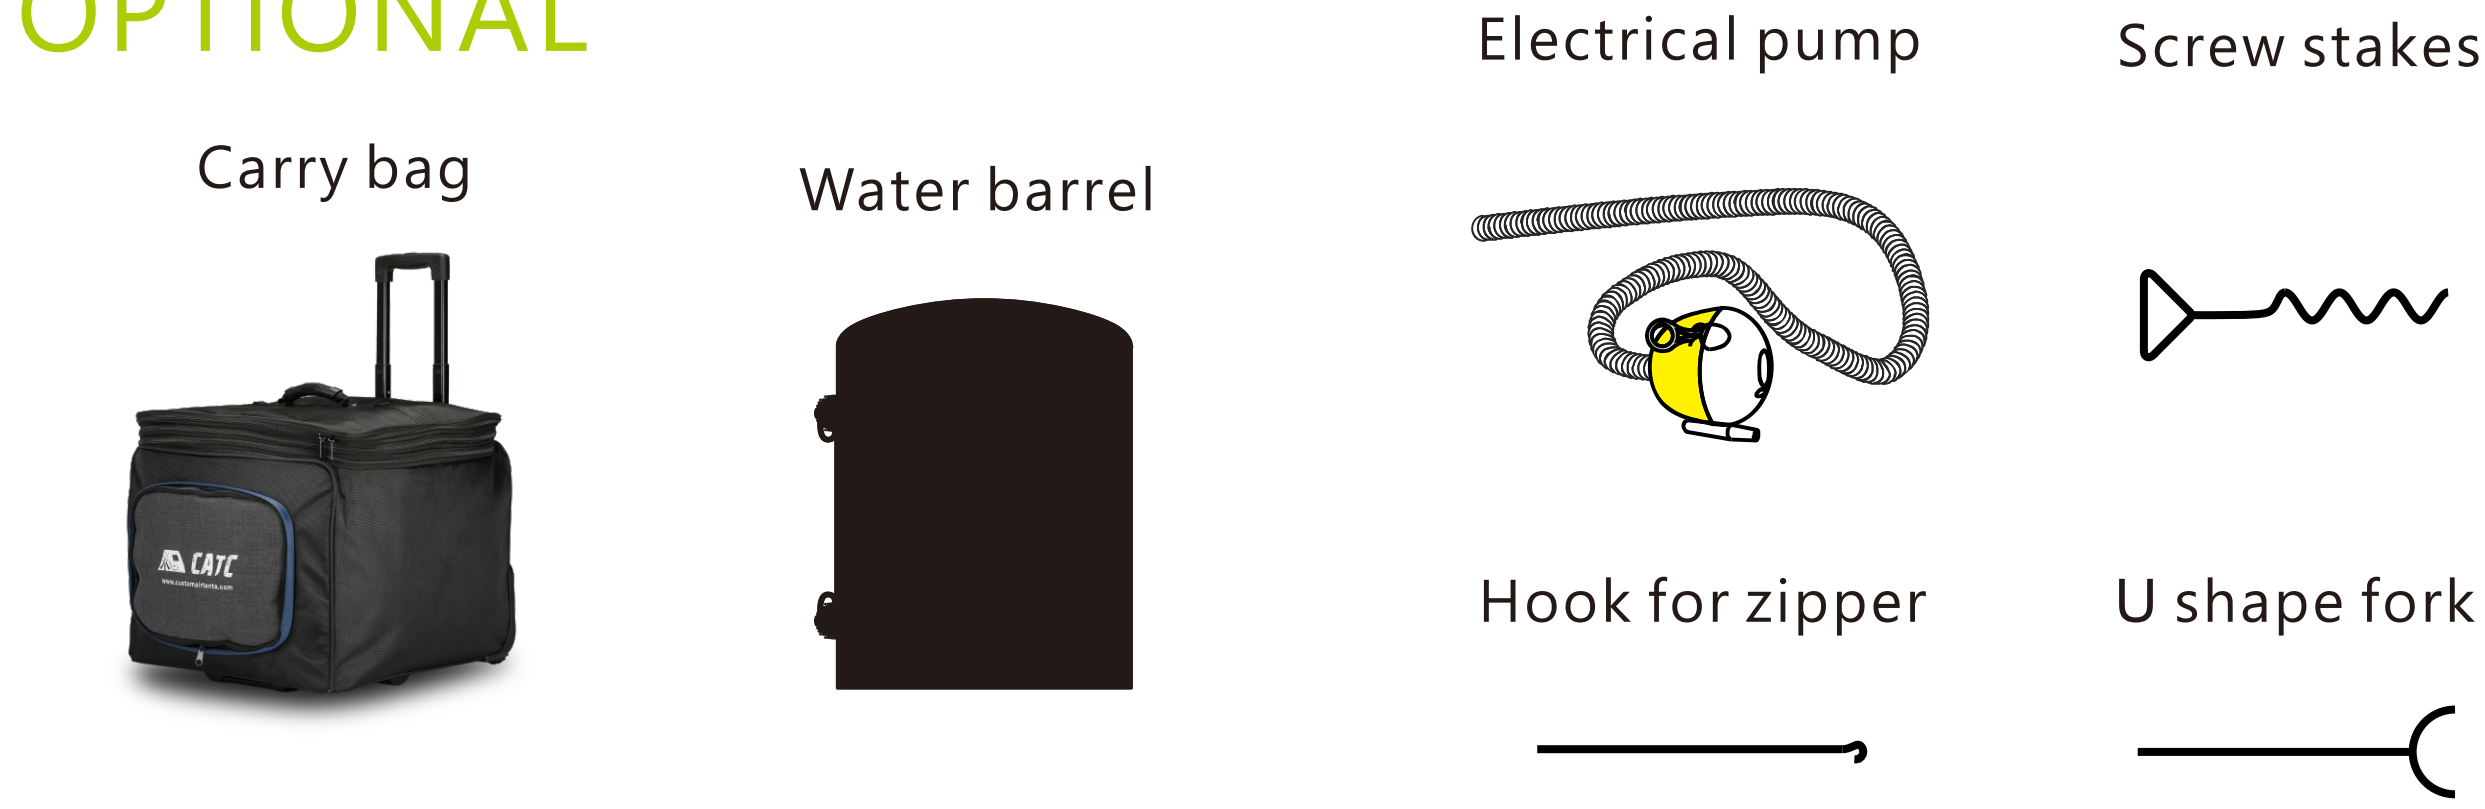

WATCH EXPLAINER VIDEO

