# **USER MANUAL**

# CAUTION

- 1) BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS TURNED OFF. TURNING THE POWER OFF USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK.
- 2) DO NOT INSTALL OR USE THE LIGHT FIXTURE IF ANY PART IS MISSING OR DAMAGED. CONTACT YOUR DEALER FOR REPLACEMENT OR MISSING PARTS.
- 3) TO PROTECT THE FINISH, DO NOT USE CLEANSERS OR ABRASIVES DURING MAINTENANCE.
- 4) TO AVOID POSSIBLE FIRE OR ELECTRICAL SHOCK, MAKE SURE NO BARE WIRE STRANDS ARE EXPOSED OUTSIDE WIRE CONNECTORS.




# INSTALLATION DIAGRAM


1, Install the arm onto the ball.

#### CAUTION:


- a) Don't hold lamp socket cap, hold the slim arm to twist:
- b) Twist the arm 10times anticlockwise before pushing the wire into the ball.

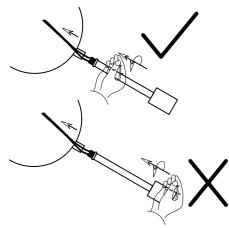

2, Thread the main wire through the down rods, and mount the down rods.

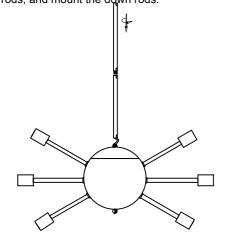


3, Mount the ceiling plate with the down rod. Fix the grounding wire onto the screw A.

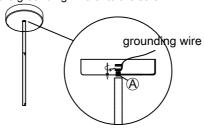

4, Fix the mount bracket onto the ceiling with screws B.




5, Wire connection.

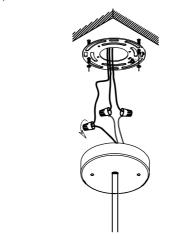


6, Mount fixture mainframe onto the mount bracket.



7, Mount the bulbs.

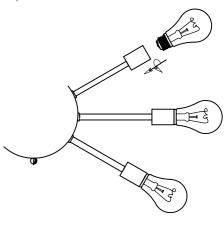

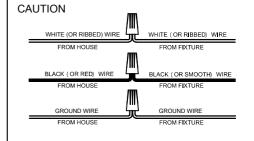

# **SPECIFICATION**


Input Voltage: 110~120V 50/60Hz

Wattage: E26 Max 60W \*12, Bulb Not Included

Product Size: Ø 28.35in(72cm) \* H 14.96in(38cm) after bulbs are mounted

3pcs 11.81in(30cm) down rods, 1pcs 5.91in(15cm) down rod, 1pcs sloped ceiling adaptor

e.

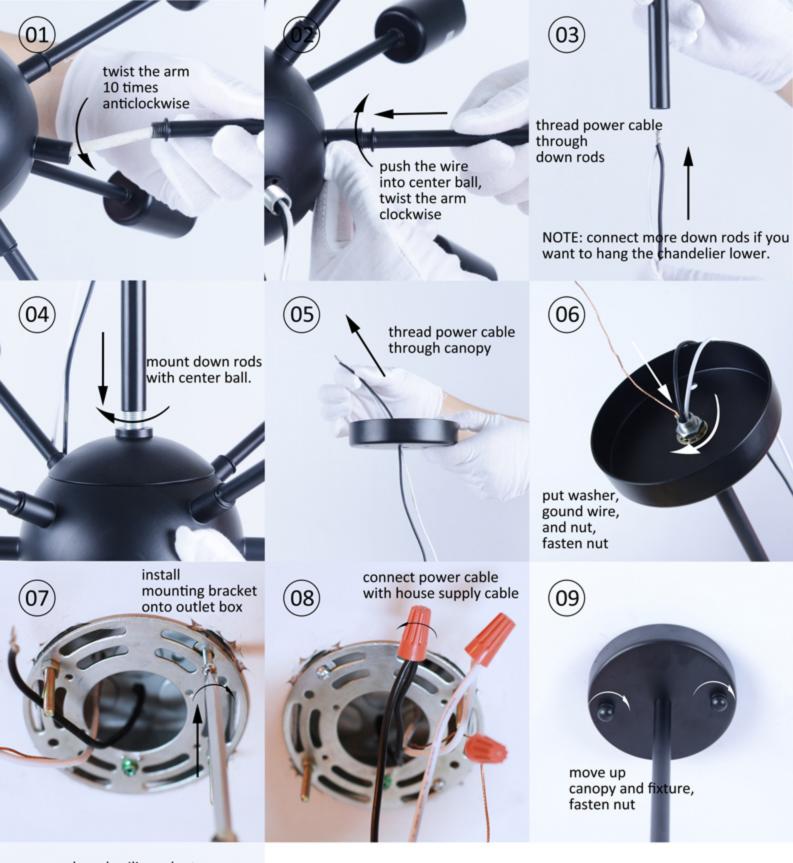





# mirrea®